
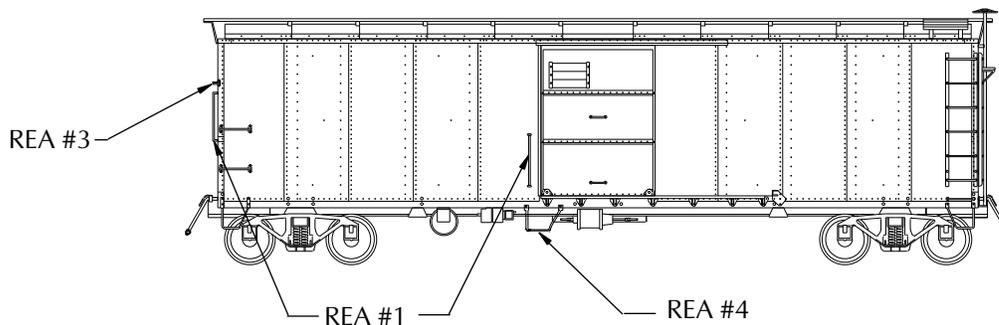
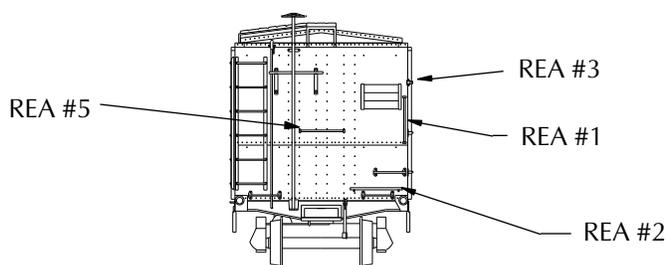


RED CABOOSE

PRR X-29 'Railway Express Agency'
Detail Sprue Instructions

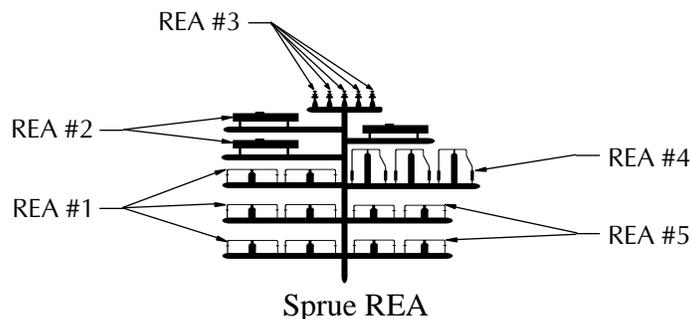

REA PARTS LIST:

Part #	Part Description	Quantity
1	Long Grab	6
2	Platform	3
3	Marker Lights	5
4	Stirrup Steps	3
5	Short Grab	4

ASSEMBLY:

1. Photos of prototype REA cars show that parts REA #1, #3 and #4 are used on all cars. Parts REA #2 and #5 are only used (possibly) on later installations.
2. Using this drawing, note locations of parts. Using a #74 drill, create holes for parts and glue in place. Note: REA #3 marker lights do not need pilot holes. Glue these directly to corner of car body.

RED CABOOSE

P.O. Box 250 • Mead, CO 80542
May 1998